



Promessa™ Series Extra Deep Corner Basket Revised: 1/5/16 Installation Procedures For The Following Models:

**Model T100-050
Extra Deep Corner Basket**

T100-050-PC




T100-050-BN



T100-050-ORB




STEP 1 Understanding Stabilizing Bracket

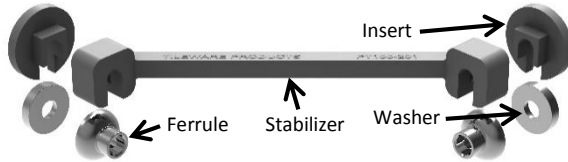


- Each basket kit comes with (1) Corner stabilizer, for standard ferrule applications & (2) inserts for thin-tile washers applications.
- Match each ferrule and washer with the corner stabilizer components above.

Not using stabilizer will result in basket mounting failure

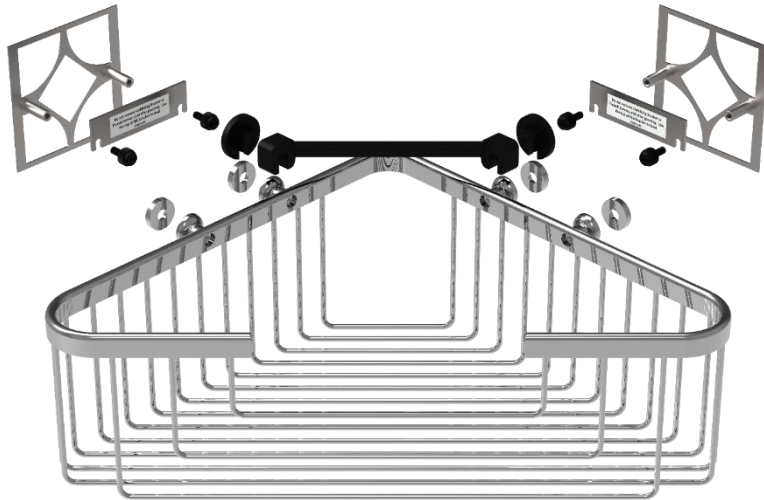


Combine Standard Ferrule with Thin-tile Washer for tile thicknesses 5/32" to 1/4"

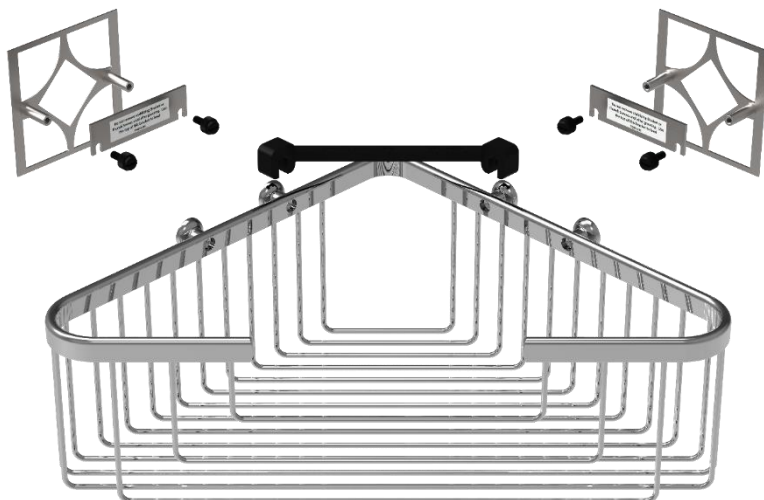

Use Standard Ferrule (only) for tile thicknesses 5/16" to 1/2"

Warning: The success of this installation system requires that the tile professional clearly understands the thickness of a tile product. Failure to understand this requirement will lead to improper installation.


STEP 2 Understand Fastener

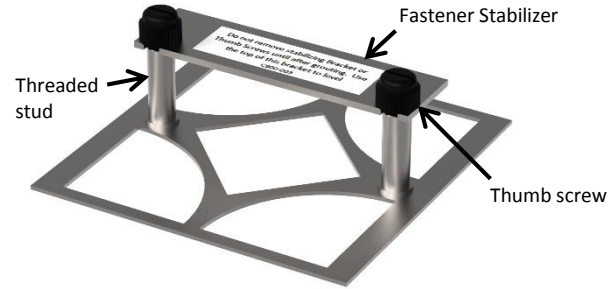

- Each PermaTile™ Fastener is equipped with a stabilizing bracket. The bracket ensures that basket mounts properly. Remove stabilizer after thin-set has met minimum cure times specified by manufacturer.

Warning: Each threaded stud is covered with a plastic thumb screw to prevent thin-set mortar from corrupting thread. Do not remove until after grouting.


STEP 3 Determine Basket Location

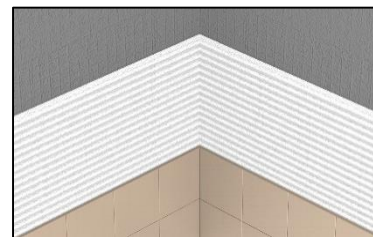

- Determine the wall surface where the PermaTile™ Fastener should be located.
- Apply thin-set mortar with no less than a 1/4" x 3/8" notch trowel.

Warning: Use only latex modified mortars that meet ANSI A118.4/A118.11 performance standard.

STEP 4 Install PermaTile™ Fastener

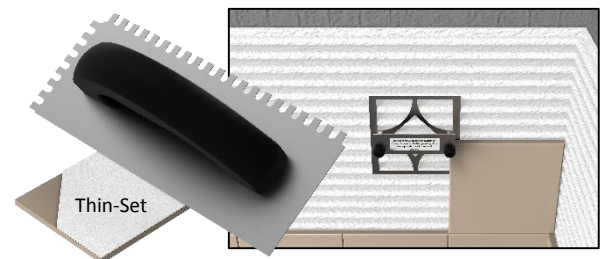

- Key thin-set mortar into the back side of tile to ensure proper contact and adhesion.
- Press the PermaTile™ Fastener into the combed thin-set mortar at the predetermined location.


Note: System will not work on tile thicknesses less than 5/32" or greater than 1/2"




Promessa™ Series Extra Deep Corner Basket Installation Procedures For T100-050

STEP 5 Install 2nd PermaTile™ Fastener STEP 9 Remount Stabilizer STEP 12 Mount Screws

- Key thin-set mortar into the back side of tile to ensure proper contact and adhesion.
- Approximate fastener 4" from corner to center of threaded stud before mounting stabilizer.
- Repeat the process on the opposing wall. Press the PermaTile™ Fastener into the combed thin-set mortar at the predetermined location.

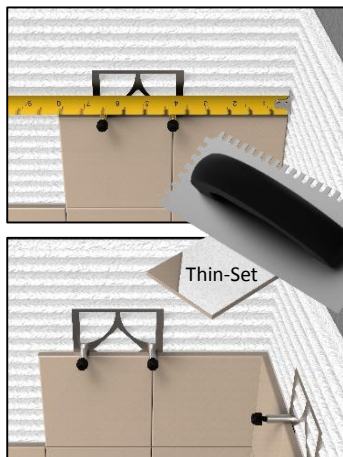

- Remount all plastic and metal stabilizing brackets as shown and **tighten thumb screws securely.**
- Make sure corner stabilizer is situated flat on tile surface, should fit freely.

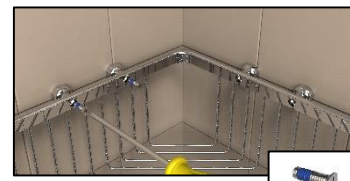


- Install stainless steel screws.

STEP 6 Adjust Fasteners



- Adjust fasteners as necessary to align corner stabilizing bracket, tighten thumb screws securely. This draws the fasteners into the required mounting position.

STEP 10 Trim options



Use Standard Ferrule (only) for tile thicknesses 5/16" to 1/2"




Combine Standard Ferrule with Thin-tile Washer for tile thicknesses 5/32" to 1/4"

STEP 13 Install Caps



- Install decorative brass caps. Easier if all prongs enter hole then press firmly.

STEP 7 Mark & Notch Tiles

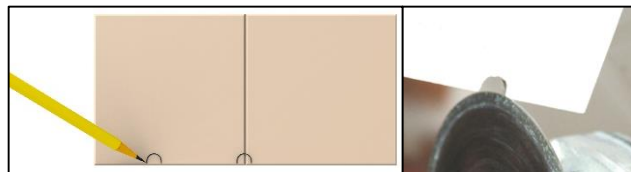

Notch or drill 3/8" or 10mm so basket trim covers holes

- Carefully remove stabilizing bracket marking left & right side notch locations. Using an angle grinder, remove enough material allowing 1/16" of adjustment, side to side and up and down.

STEP 8 Install Notched Tiles



- Install notched tile, key thin-set mortar into the back side of tile to ensure proper contact and adhesion. Press tile into wall and adjust as necessary.

STEP 11 Install Trim



- Immediately proceed to accessory mounting after grouting is completed.
- Simply slip ferrules or ferrules & washers over studs.

Thank you for using our products!

TileWare Products
PO Box 793, Hickory, NC 28603
Technical Support: 828-322-9273
Email: info@tilewareproducts.com
www.tilewareproducts.com

Extra Deep Corner Basket Parts List

Basket quantity 1 per kit	Fastener Assembly quantity 2 per kit	Standard Ferrule quantity 2 per kit	Thin-tile Washer quantity 2 per kit	Cap quantity 2 per kit	8-32 Screw quantity 2 per kit	Plastic Corner Stabilizing Bracket with Inserts quantity 1 set
239250 	PT100-504 	255245 	C220-020 	243168 	A008185 	PT100-201